

Assembly of Roll Pro[®] Tape Coiler

1. Put the tape coiler on the table with tape socket facing right and pull the Side Plugs out



2. Open the box. If it's hard to open it, try to pull The WallMount sides down





3. Take out the Tape Holder



4. Put the Tape through the Wheel




5. Put tape through the Tape Holder

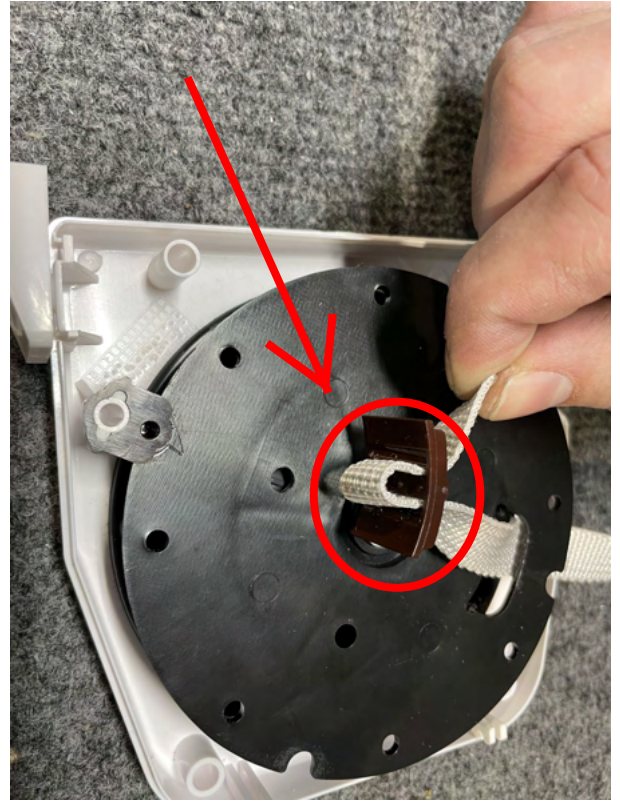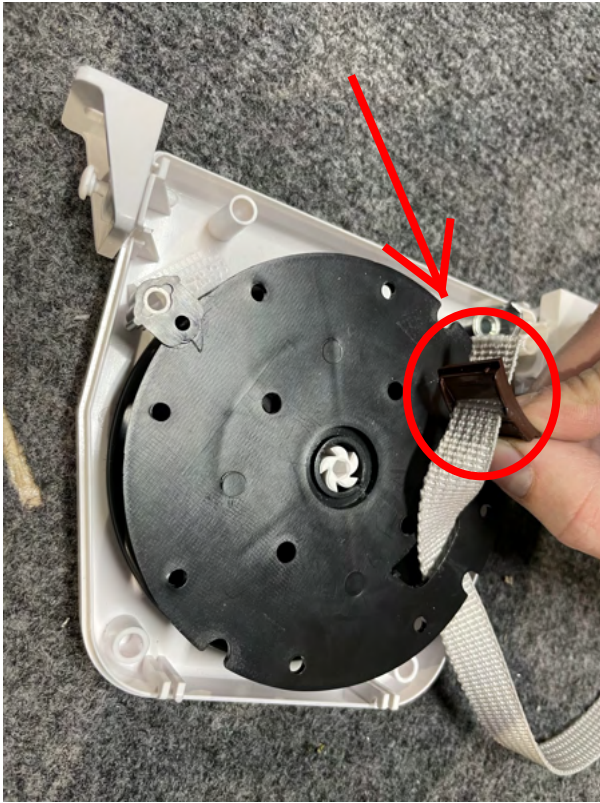

6. Set Tape Holder Back






7. Hold the Wheel while taking the Wheel Holder away

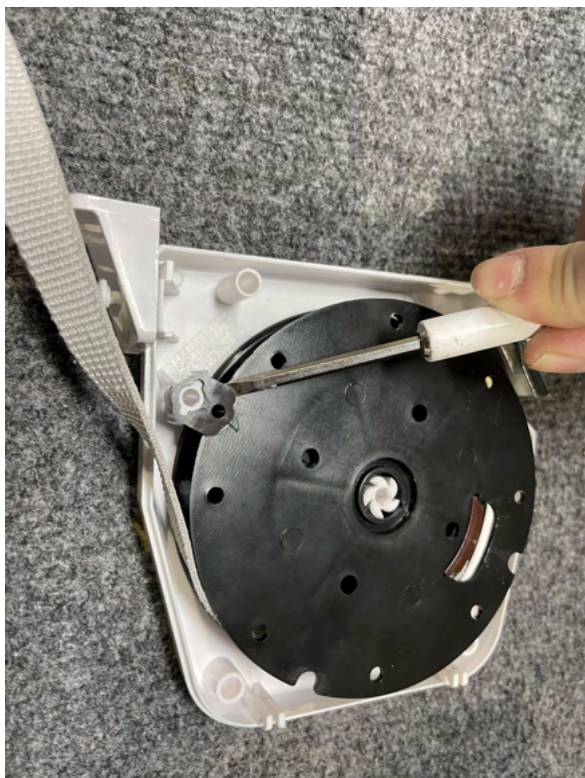

8. Correct the Tape and Put it through the roller part



9. Hold the Tape, then, gently release the Wheel a little bit and let it roll the major part of the tape on

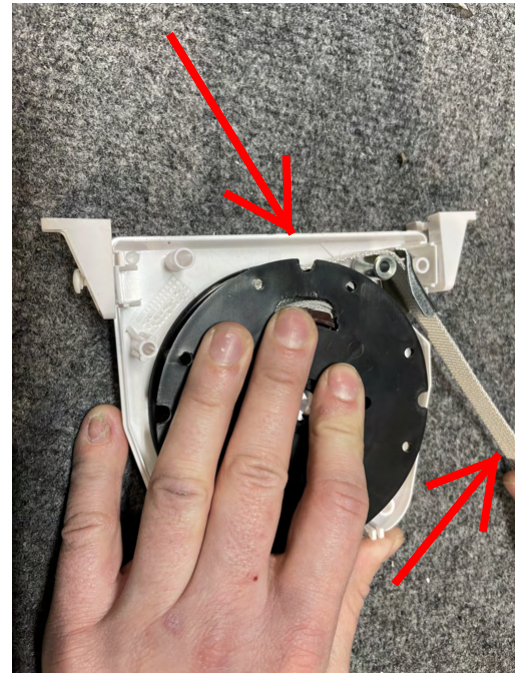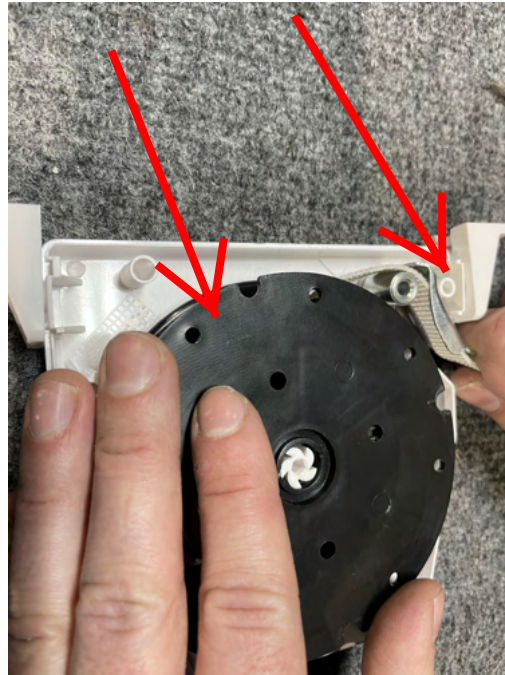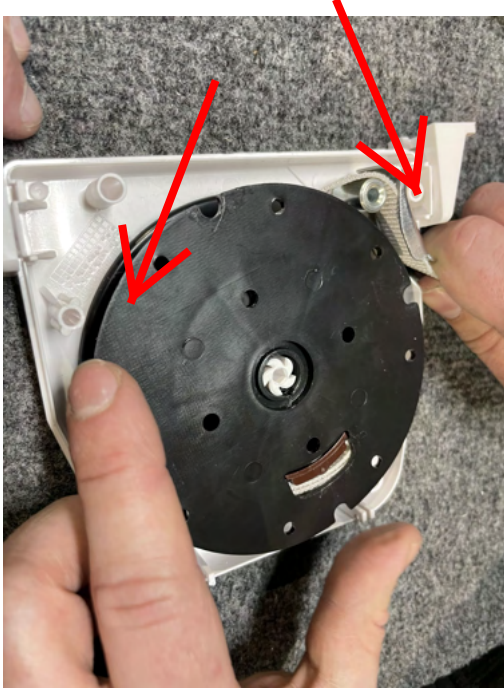

10. Jam the tape with the Clip, so you will have some of it outside. Also, you can make a knot from the tape.



11. Close the box



12. Pull the WallMount Sides in this position and snap the Side Plugs. Dont remove clip from the Tape or hold it with hands




Check if the tape going back and forth at position 1 (horizontally) freely. It should not move at position 2 (vertically).

Dont remove the clip or hold the Tape untill you will attach it to the Shutter.



position 1

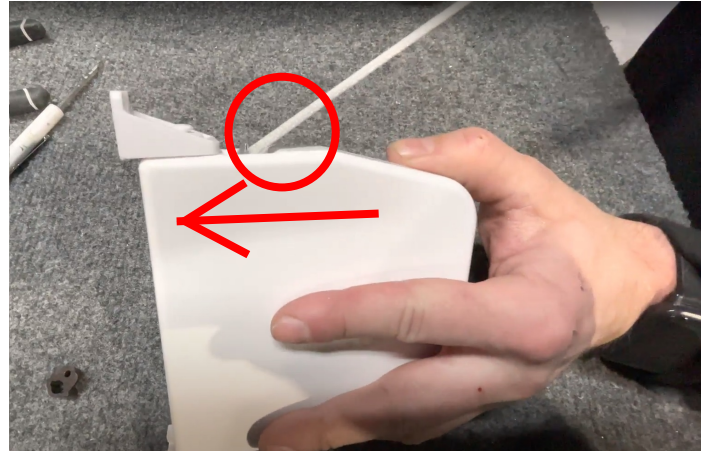

position 1



position 2

More questions? Contact us:

Roll Pro[®] Shutters

2160 HWY 7, Unit #28
Concord, ON, Canada, L4K1W6

E-mail: sales@rollpro.ca

Tel: (905)-532-0017

Toll Free: 1-(855)-474-7657

Fax: (905)-532-0017